



Transistors III: FETs

- 3-terminal device like a BJT
- New names for the connections
 - **Drain** (input) ... sort of like collector
 - **Source** (output) ... sort of like emitter
 - **Gate** (controls flow) ... sort of like base
- 2 broad types
 - Junction FETs (JFETs)
 - Metal-oxide-semiconductor (MOSFETs)

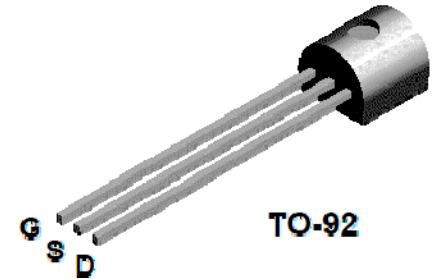


TO-92

Drain

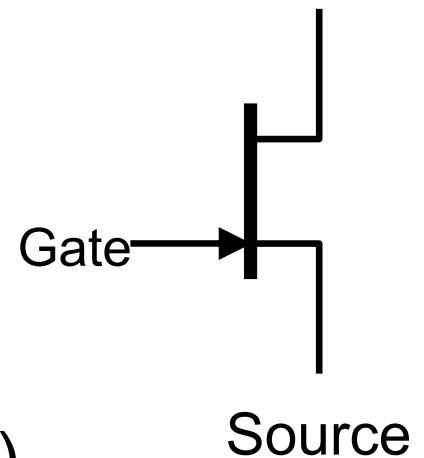

Principle of Operation

- Made from a conducting piece of silicon
 - This is called the **channel**
 - **Drain** on one end
 - **Source** on the other
 - In the middle a **gate** is embedded
- Current regulation
 - If the gate is at a negative voltage there is a charge **depletion zone** around the gate
 - Current cannot flow in this zone
 - Expands as the gate becomes more negative
 - Controls the conductivity of the channel
- At a **pinch off voltage** the current stops (V_p)
 - Think of pinching a hose to cut off the flow of water

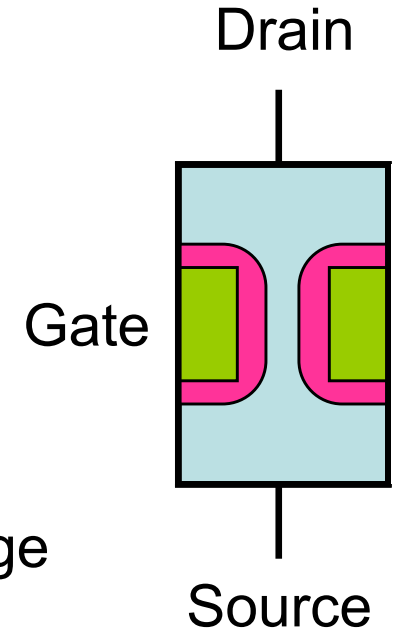

JFETs vs. MOSFETs

- JFET gate forms a diode junction with the channel. Input impedance $\sim 10^{12} \Omega$.
- MOSFET has an insulating layer for better input impedance (up to $10^{14} \Omega$).
- MOSFETs have an extra terminal called the **body**.
 - Usually just connected to the source to remove charge.
- MOSFETs are generally used for power circuits and digital circuits.
- Many other types now available.

FETs vs. BJTs

FET Pros


- The gate of a FET draws almost no current (i.e. pA range).
- FETs have almost infinite input impedance.
- Can frequently make a better amplifier circuit with a FET.
- Can operate bi-directionally sometimes.

FET cons

- FETs are more complicated than BJTs
 - complicated operational model.
- FET have even larger parameter spreads than BJTs.

FET properties

- Can be a n-channel or a p-channel
 - **N-channel** like *npn*
 - **P-channel** like *pnp*
- Gate may be centered on some diagrams
 - Have to figure out it which is which from “context”
 - Source & drain are nearly identical
 - Can be used backwards with almost same performance
- **N-channel usually faster** than **P-channel** due to higher mobility of electrons vs holes moving in the channel.

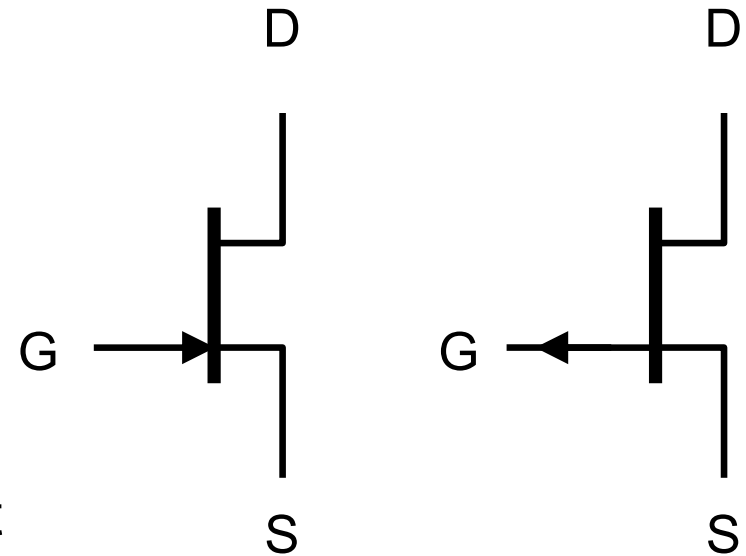

n-channel JFET (left)
p-channel JFET (right)

Gate Voltage Rules

V_p = pinch-off voltage: this is an intrinsic parameter of the JFET.

➤ $V_{GS} < V_p$
→ $I_D = 0$


➤ For $V_{GS} > 0.6\text{ V}$
→ **Device Fails!!!**

→ Try to keep $V_{GS} < 0$

➤ **$V_p < V_{GS} < 0.6\text{ V}$**

→ I_D depends on both V_{GS} & V_{DS}

→ A complete description would require a 2D function: $I_D(V_{GS}, V_{DS})$

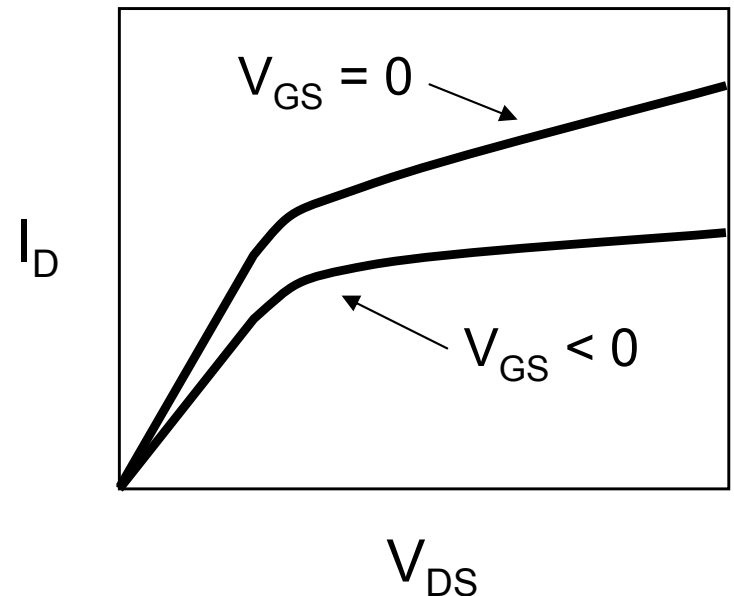

Linear and Saturation Region Performance


Linear Region : $V_{DS} < V_{GS} - V_P$

$$\rightarrow I_D = k [2(V_{GS} - V_P)V_{DS} - V_{DS}^2]$$



Saturation Region : $V_{DS} > V_{GS} - V_P$

$$\rightarrow I_D = k (V_{GS} - V_P)^2$$

- V_p is the **pinch-off** voltage
 - ➔ It's negative for n-channel.
 - Voltage where conductance stops
 - **Huge** manufacturing spread
- k is a constant
 - Depends on the physical size of the channel (length/width)
 - Depends on the manufacturing details

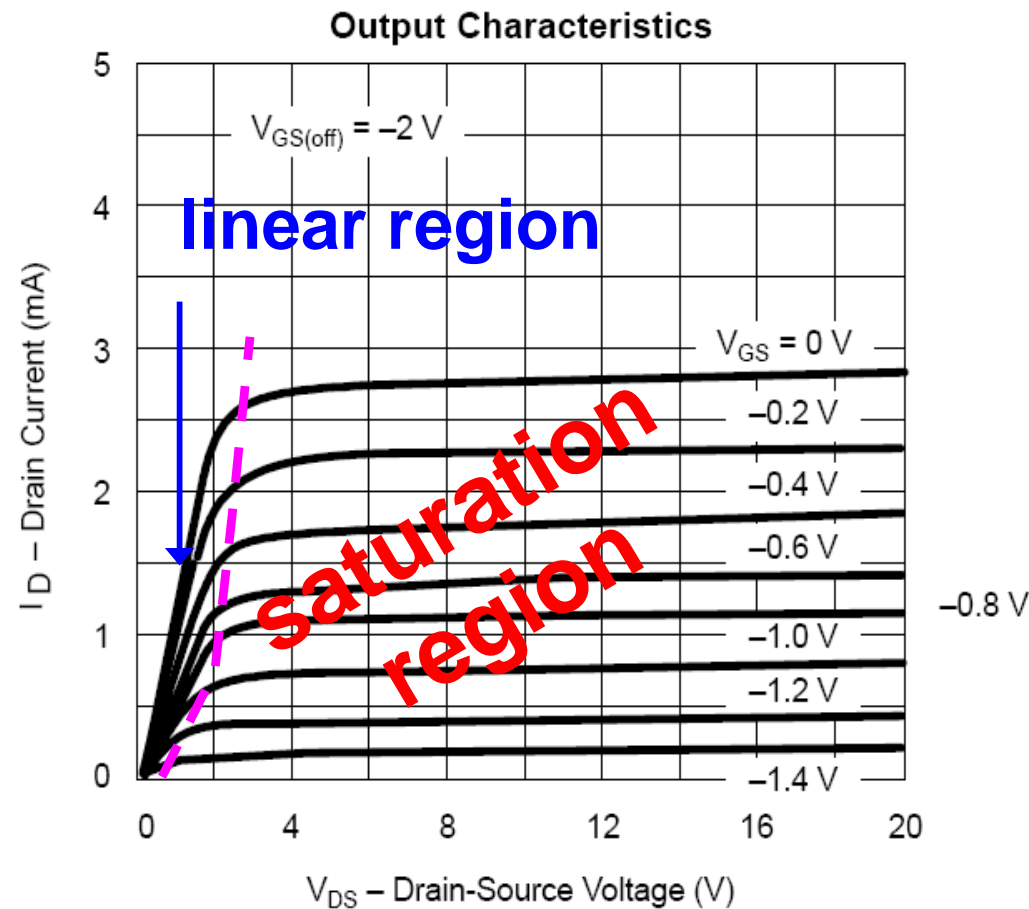

Ideal Performance vs. Reality

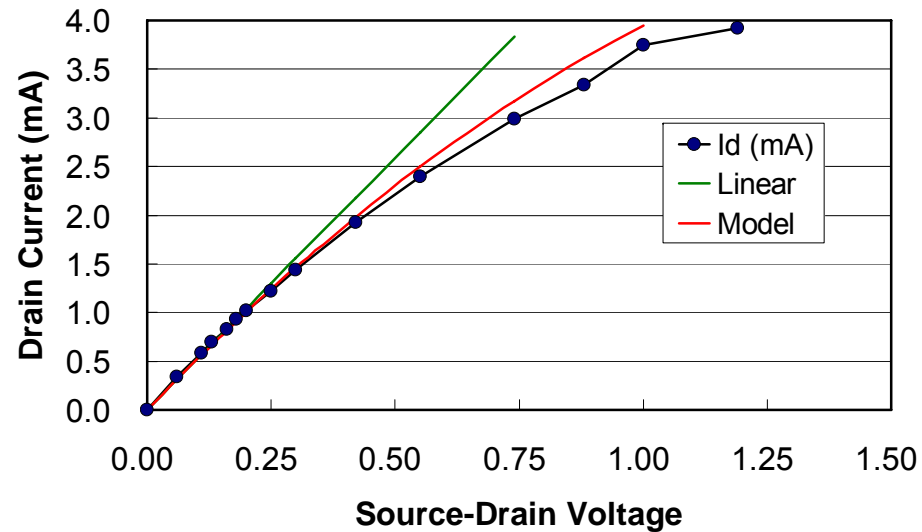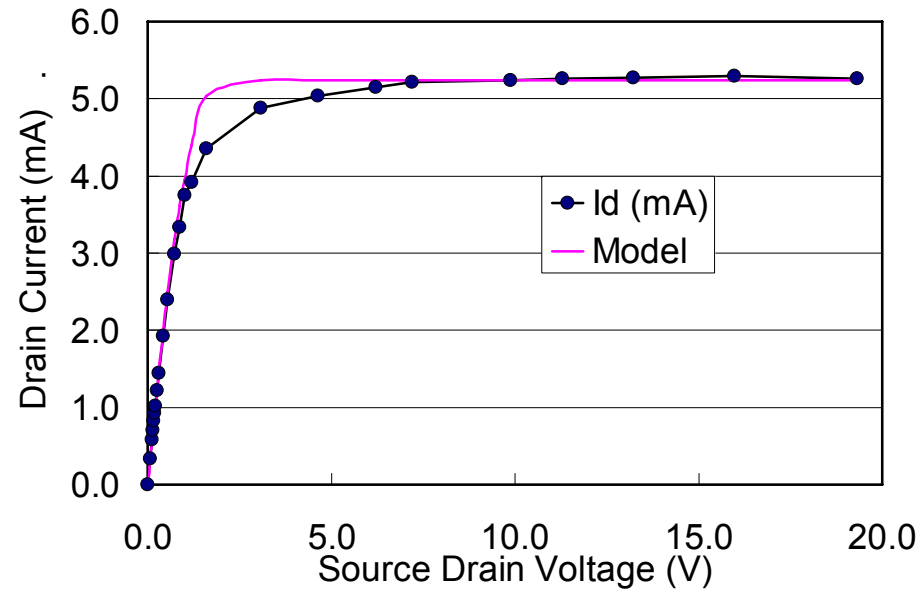

2N3958

Vishay Siliconix




SPECIFICATIONS ($T_A = 25^\circ\text{C}$ UNLESS OTHERWISE NOTED)

Parameter	Symbol	Test Conditions	Limits			Unit
			Min	Typ ^a	Max	
Static						
Gate-Source Breakdown Voltage	$V_{(BR)GSS}$	$I_G = -1\ \mu\text{A}, V_{DS} = 0\ \text{V}$	-50	-57		V
Gate-Source Cutoff Voltage	$V_{GS(off)}$	$V_{DS} = 20\ \text{V}, I_D = 1\ \text{nA}$	-1.0	-2	-4.5	V
Saturation Drain Current ^b	I_{DSS}	$V_{DS} = 20\ \text{V}, V_{GS} = 0\ \text{V}$	0.5	3	5	mA
Gate Reverse Current	I_{GSS}	$V_{GS} = -30\ \text{V}, V_{DS} = 0\ \text{V}$		-10	-100	pA
		$T_A = 150^\circ\text{C}$		-20	-500	nA
Gate Operating Current	I_G	$V_{DG} = 20\ \text{V}, I_D = 200\ \mu\text{A}$		-5	-50	pA
		$T_A = 125^\circ\text{C}$		-0.8	-250	nA
Gate-Source Voltage	V_{GS}	$V_{DG} = 20\ \text{V}, I_D = 200\ \mu\text{A}$	-0.5	-1.5	-4	V
		$I_D = 50\ \mu\text{A}$			-4.2	
Gate-Source Forward Voltage	$V_{GS(F)}$	$I_G = 1\ \text{mA}, V_{DS} = 0\ \text{V}$			2	
Dynamic						
Common-Source Forward Transconductance	g_{fs}	$V_{DS} = 20\ \text{V}, V_{GS} = 0\ \text{V}$ $f = 1\ \text{kHz}$	1	2.5	3	mS
Common-Source Output Conductance	g_{os}			2	35	μS

V_P



Solving for the current graphically

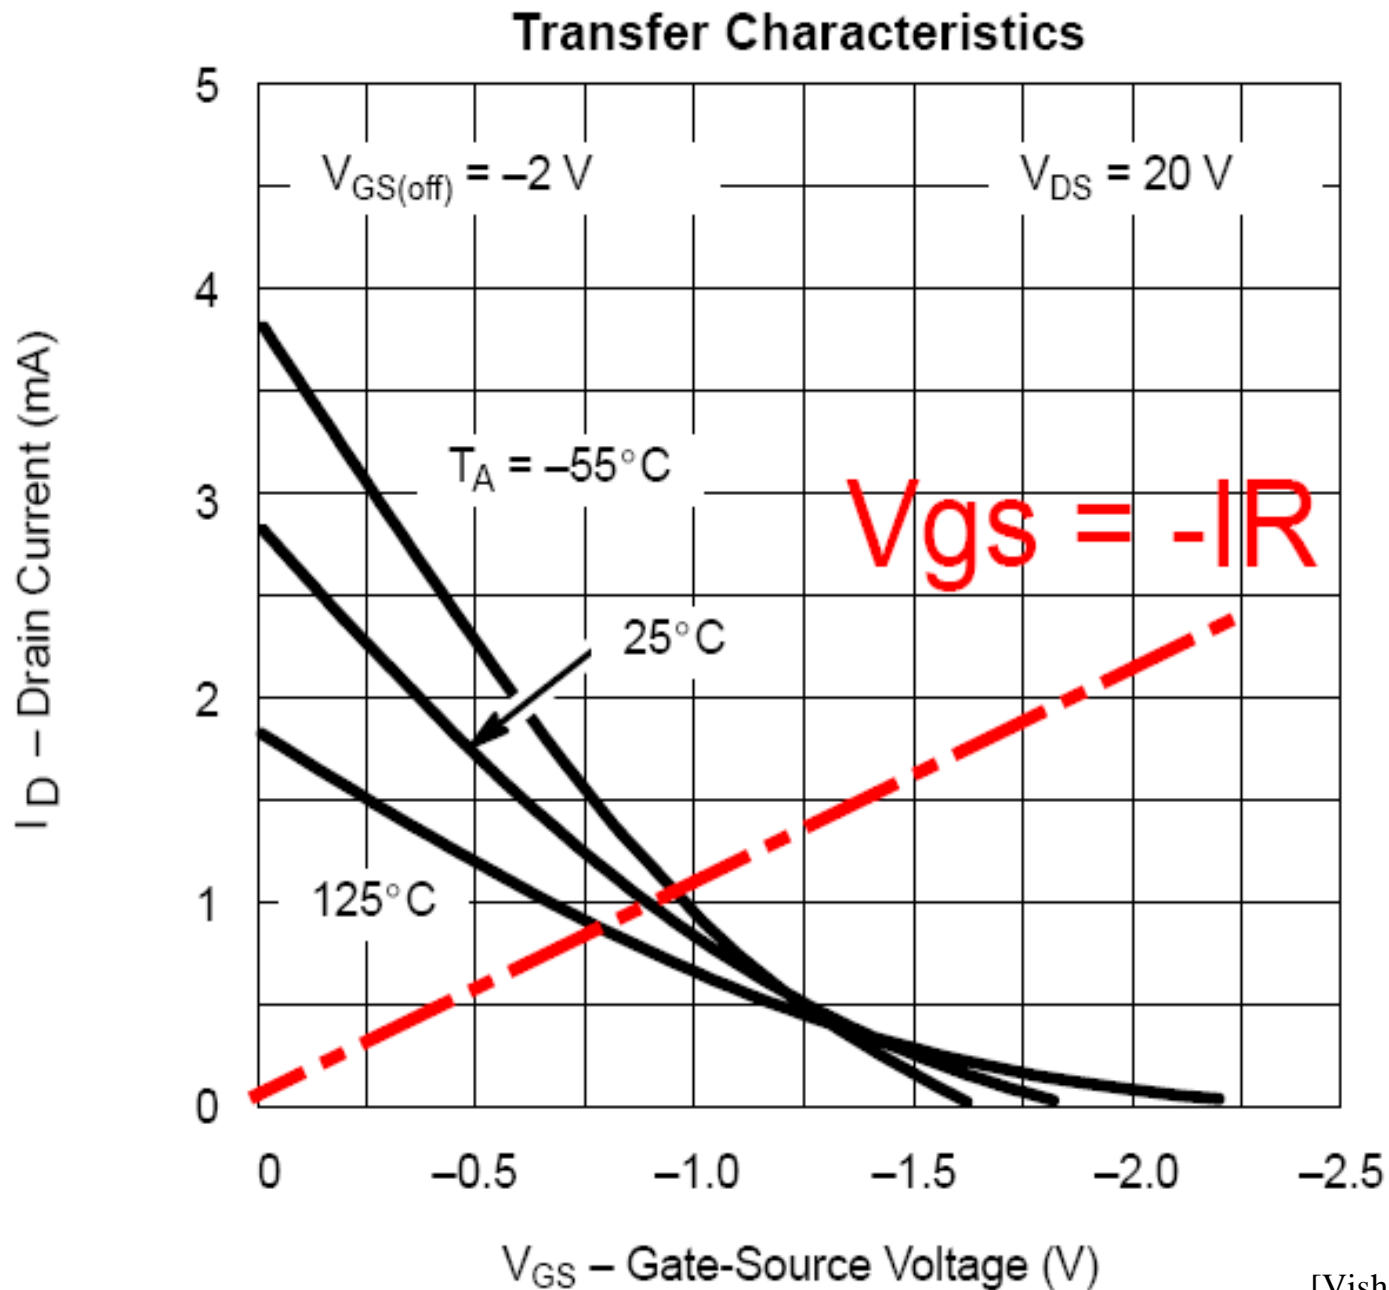

Transconductance in the Saturation Region

- There is a quiescent current given by I_D .
- Use lower case symbols to represent small changes around the quiescent values
- **Transconductance:** $g_m = i_d/v_{gs}$
 - Just the slope of I_D vs V_{GS} in the saturated region.
 - Depends on I_D .
- Smaller variation for $V_{GS} < 0$ V.
- Units: Ω^{-1} =mho (pronounced “Moe”)
 - μ mho or umho for 10^{-6} mho.
 - mmho for 10^{-3} mho.
 - Sometimes see \bar{U}

